

HD MEDIA PLAYER

Instructions

Dear customers:

Thanks for purchasing the product. Before using this player, please read the "instructions" carefully, We are not responsible for any damage for the hardware, program, file and system of the player caused by improper use. Please keep the manual as reference.

 
Catalogue

1. Product introduction	3
2. Interface diagram	3
3. Specifications	3
4. Remote control	4
5. Function introduction	5
5.1 Startup interface	5
5.2 File play steps	5
5.3 File copy, deletion and renaming	10
5.4 System settings	11
5.5 Display resolution setting	11
5.6 Screen rotation	12
5.7 Video Resume	12
5.8 Subtitles	13
5.9 Auto play setting	13
6. Accessories	14
7. FAQ	14

1. Product introduction

This mini HD player is suitable for both home and business. It supports external mobile storage to play HD video at home and to auto play video, pictures, music at business. It can be played circularly and mixed. This machine supports both AV and HDMI HD video output.

2. Interface diagram

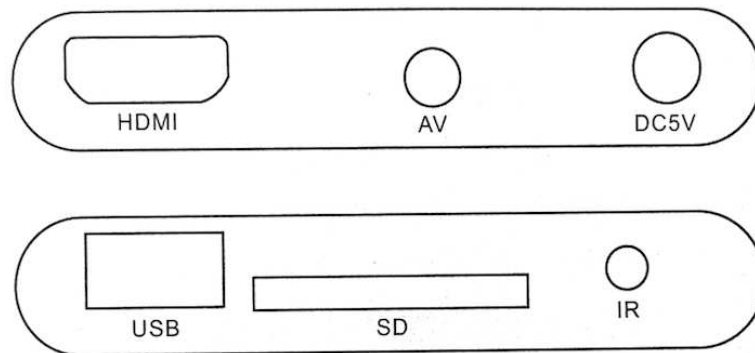

3. Specifications

RESOLUTION	1920*1080
Weight	80g
Video Output	HDMI /AV
Max.Extended Capacity	SD Card Up To 128GB
Power	DC 5V,1.5A
Color	Black/ Blue
Video format	MP4.MOV.AVI.DV.WEBM.TS. WMV.MPG.M2V.3G2.3GP.M2TS. VOB.M4V.F4V.MKV.ASF.FLV

Audio format	MP3、FLAC、APE、WAV、WMA、DTS、AAC、MKA、MP2、AMR、M4A、AC3、AU、AIFF
Picture format	JPG、BMP、JPEG、GIF
Button & Ports	SD、USB、AV、HD、DC、IR

Note: Due to differences in coding, size and production software, it is not guaranteed that all the above files in the same format are supported.

4. Remote control



- ⏻ On/off button: Click to enter the deep standby state.
- 🔇 Mute button: Disables audio output.
- ⚙️ Setting key: Quickly access the setting screen.
- 🔄 Mode switch key: When playing video, video, music can quickly switch the cyclic mode.
- 🖱️ Mouse key: Click the mouse key to bring out the mouse. If you click the mouse key again, the icon will disappear 15 seconds later. Do not click the mouse key continuously.
- 👆 Direction keys: Can achieve up and down left and right movement selection.
- 🏠 Home key: To return to the home page with one key.
- ☰ Menu key: Press this key to set the playback mode when playing a file.
- ↶ Return key: Used to return to the previous step or exit the operation.
- ⏩ Fast forward key: can achieve 2x 4x 8x 16x fast forward

- ▶ Play pause button: pause and play switch.
- ⏮ Fast rewind key: can achieve 2x 4x 8x 16x fast rewind.
- ⏮ Time selection key: Pressing this key during video playback can accurately select the time point to be played.
- ⊗ Scale key: You can adjust the display scale of the screen when playing a video or image.

VOL-: Volume decreases.

 
VOL+: Volume plus.

Note: Some function keys of the remote control will be changed and improved in the future upgrade.

5. Function Settings

5.1 Startup interface

There are five options on the main interface: video, photo, music, file, and Settings (as shown below)

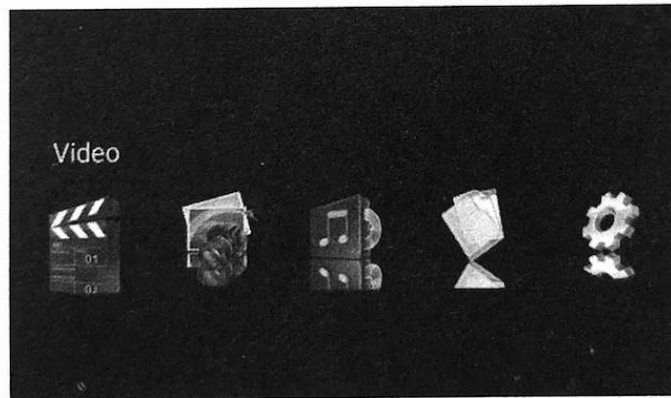

5.2 File play steps

Video playback: Main interface- video icon-open the storage to find the video to be played.

 
During the video playback process, press the remote control serving menu button, and the setting option appears to set the relevant mode of the video playback (as shown below)

Screen display: screen display scale.

Playback mode: When playing the video ,press the menu button on the remote control to Set up the music loop mode (Note: pressing the loop key on the remote control can also quickly switch the loop mode).

Subtitle: Support video external subtitles;The name of the external subtitle needs to be consistent with the video file name.Example: Video:Hero.MP4 Subtitle:Hero.srt.

Track: switch to different voices when the movie file has multiple tracks.

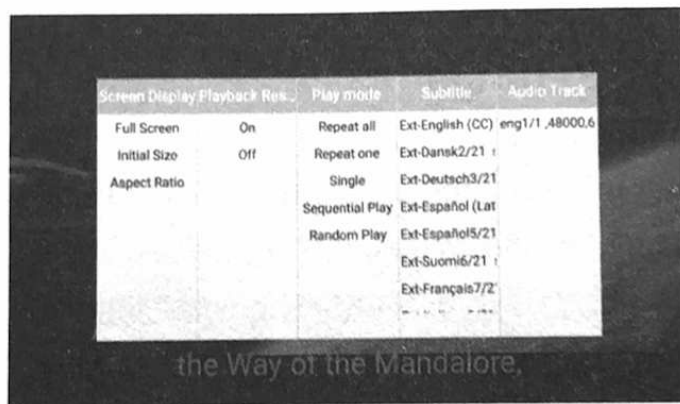

Video fast forward, rewind, play, pause

 
During the video playback process, you can use the REV button on the remote control to quickly rewind the video 2x 4x 8x 16x.

Pressing the FWD button can achieve 2x 4x 8x 16x fast forwarding of the video (as shown in the following figure). When you need to play, press the PLAY/PAUSE button on the remote control to play or pause.



Video timing settings

Pressing the GOTO key on the remote control during video playback can achieve video timing playback (as shown in the following figure)

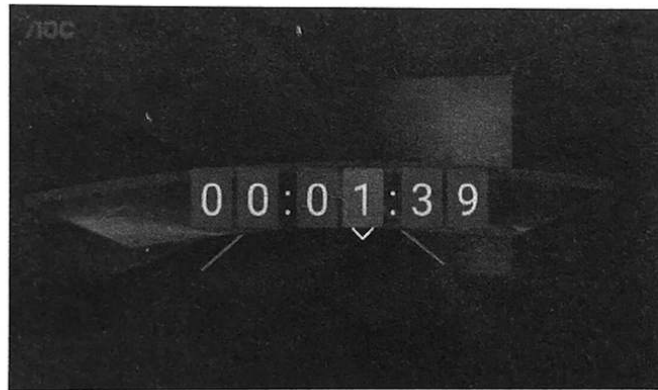

Video and image scaling settings

When playing a video or image, pressing the RATIO key on the remote control can quickly switch the video or image scale to Full Survey, Initials Size, and Aspect Ratio (as shown in the following figure)



Picture playback: main interface-open the picture icon-open the external storage to find the picture to be played.

During playing the picture, press the menu button on the remote control can set the relevant mode of the picture (as shown below)

Switching mode: the display effect of the picture switching.

Switching time: the interval between pictures and pictures.

Background music: the indicated music file can be set during playing the picture.


Display mode: when the picture is played in different proportions.

Play mode: the picture is played in a loop or randomly, played in order for the current all pictures only played once and no longer play.

Switch Mode	Switch Time	Music	Display Mode	Play Mode
Default	0 second	On	Full Screen	Loop Play
Zoom In/Out	5 seconds	Close	Fit Screen	Sequential Play
Go Up	10 seconds		Original Size	Random Play
Fade In/Out	30 seconds			
Erase	1 minute			
Go Down	3 minutes			
Expand	5 minutes			


Image Direction Rotation Operation

 When playing an image, pressing the up or down button on the remote control can switch the display direction of the image, as shown in the following figure.

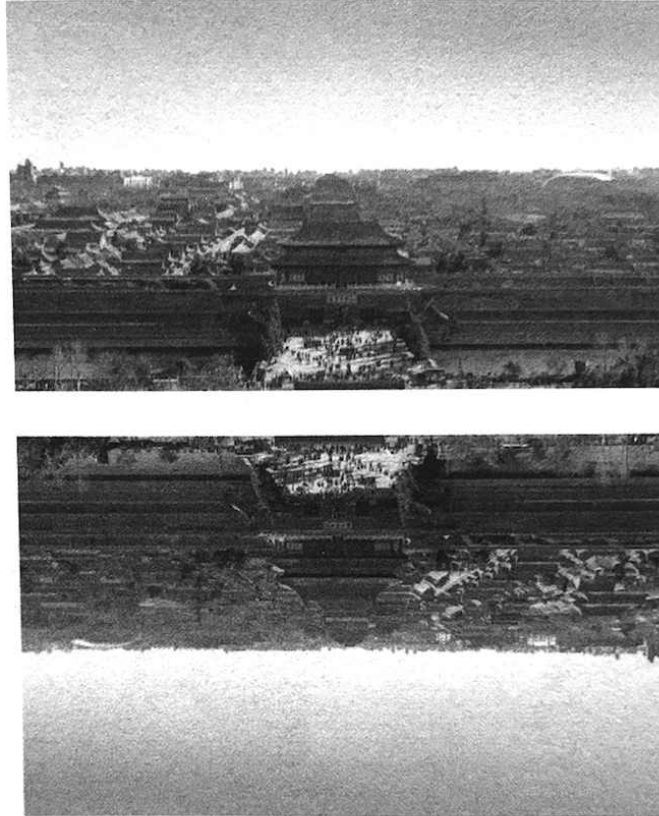


Music playback: After starting the machine, display the main interface- -open the music icon- -open the external storage to find the music to be played.

 When playing music, you can set the music cycle mode by pressing the menu button on the remote control. (Note: directly pressing the loop key on the remote control can also quickly switch the cycle mode).

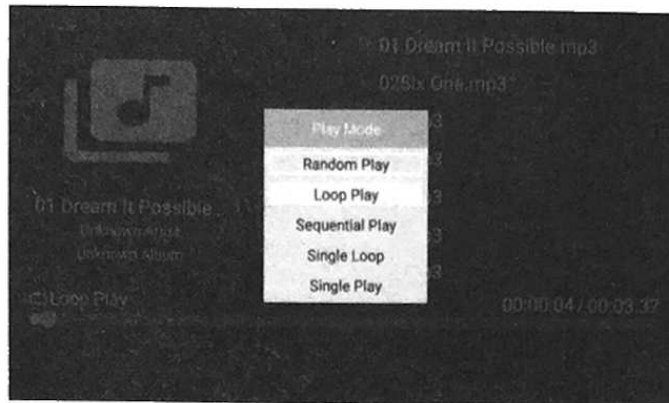


5. 3 File copy, deletion and renaming

 File replication, deletion and renaming need to be entered from the folder option in the main interface. Open the storage and select the files that need to be copied, deleted and renamed, and then press the menu key on the remote control to pop up new copy, deletion, cut and renaming options as shown in the figure below.

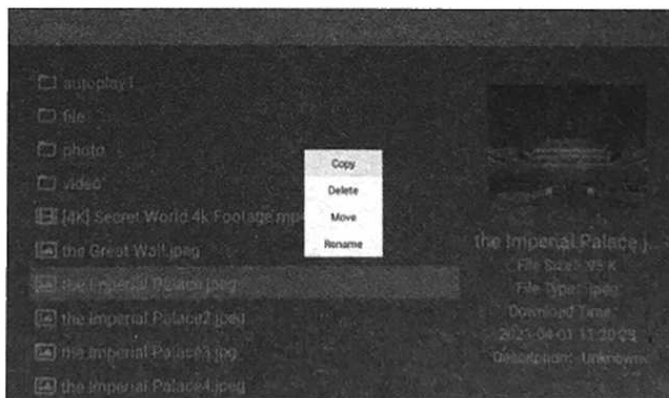


Take replication as an example: Choose the name to copy, press the menu button to copy mobile options, select copy and press the OK key, menu options disappear, press the remote return key to choose to paste to another storage, open the other store to paste position, press the menu on the remote key to paste and press the OK key will automatically copy to the current position, as shown in

 the figure below.

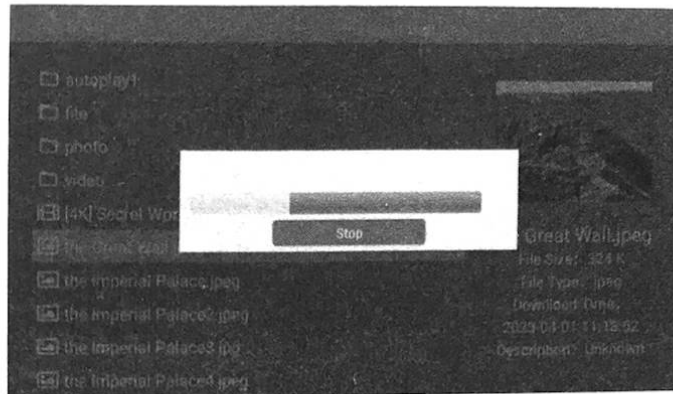


5.4 System Settings

 This setting item includes 7 settings: language, display resolution, automatic playback, audio output, screen zoom, factory recovery, and system information.

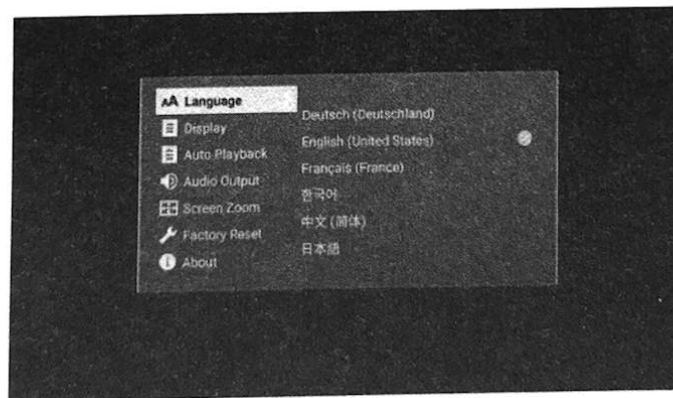


5.5 Display the resolution settings

 This machine supports HD output, up to 1920 * 1080 60H display, with the default automatic detection resolution.

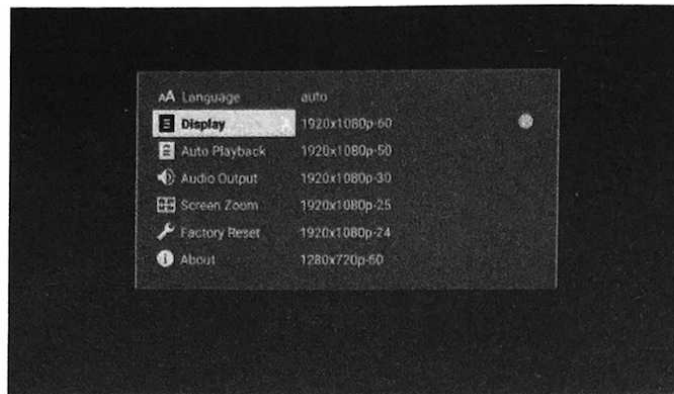

5.6 Auto play settings (files that need to be autoplayed must exist in the root directory of the U disk, and files in the U disk folder or subdirectory cannot actually autoplay)

 Autoplay setting steps: Open the main interface-setting-automatic play option pop up the following options, need to automatically play video to select video, automatically play music to select music, automatically play picture, if set automatic video and picture options, will automatically play the video and then play the video all the loop.

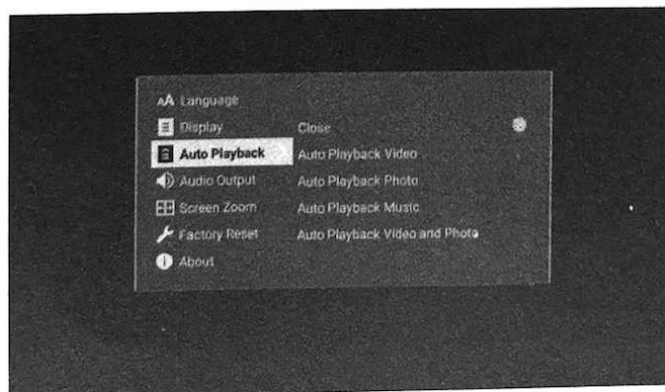

5.7 Audio connection

 
This machine supports HDMI and AV audio output, such as video signal connected with HDMI, audio can be directly connected to

the player AV port with 3.5 audio head to output audio.

5.8 Screen zoom


When the player is connected to the display screen is not complete, the screen zoom can be used to make adjustment.

Operation method: open the screen zoom option in the Settings (as shown below) press the left button of the remote control to realize the contraction of the left and right sides to the middle, press the right button to realize the left and right expansion, press the upper key to realize the upper and lower sides to the middle contraction, press the key to realize the upper and lower sides of the expansion.

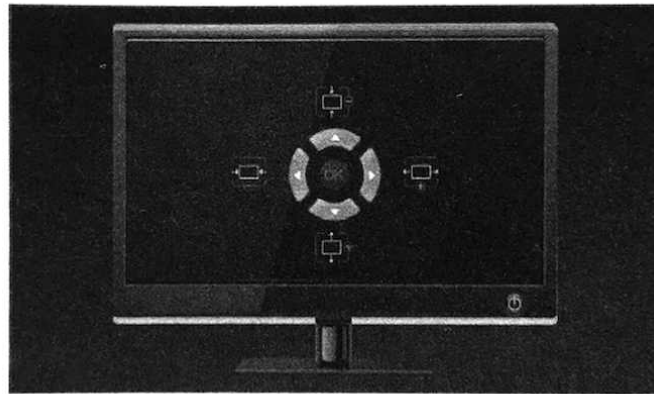

5.9 Factory Reset

 After the operation in the settings, all the settings of the player will return to the factory state (operate carefully)

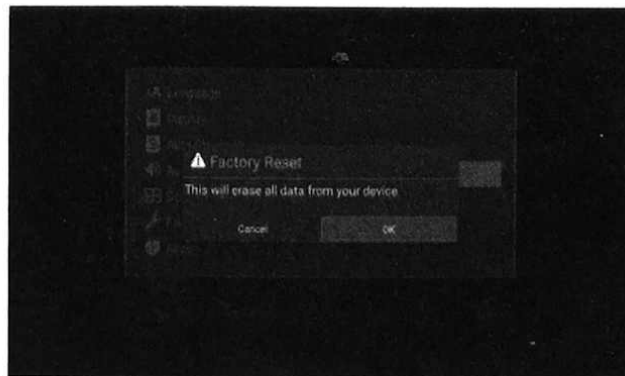

6. Accessories

Play Host *1

Remote control*1

AV cable *1

Instruction manual *1

Power supply *1

7. FAQ

1. SLR camera photos cannot be played, it should be noted here that the picture resolution can not exceed 4000 * 4000, the capacity of a single picture can not be greater than 4M, if more than one of the factors will not support playing.

2. 3840 * 2160, 2160 * 3840 video can not be played, because the highest horizontal screen can support 1920 * 1080, the highest vertical screen only supports 1080 * 1920 vertical files, files exceeding this requirement can not be played, such as 1200 * 1920 also over, so it can not be played.

3. Why there are no subtitles and tracks when playing a movie:
When playing a video with multiple tracks and subtitles, you can press the menu button on the remote control and set the track and subtitles in the menu option that pop up.

4. HDMI HD line audio can be single audio, the answer is ok.
Because the AV interface is the standard 3.5 port, the 3.5 audio head can be connected to the AV port, and the video uses HDMI.

4. This machine does not read the U disk, please check whether the U disk can be used normally on the computer, if you can be recommended to reformat the U disk to test, this machine supports FAT 32, NTFS formatting U disk.(U disk as far as possible to choose the brand official website to buy)

5. This machine is 5V power supply, over 5V will cause the burning machine and burning U disk, please pay strict attention to the power supply.

6. Why the longer HD cable did not show, here need to pay attention to the length and quality of the HD line, we suggest customers with the 2.0 version of pure copper HD cable, the length is controlled within 10 meters, if the actual longer, please refer to the actual situation.

7. This machine does not support the third-party system, if you need to customize, please contact the customer service personnel.

8. The heat dissipation space of this machine is not less than 2 times the machine space, and it is strictly prohibited to install the machine directly in other electronic equipment chassis or shell.

More questions are available from the customer service staff.